


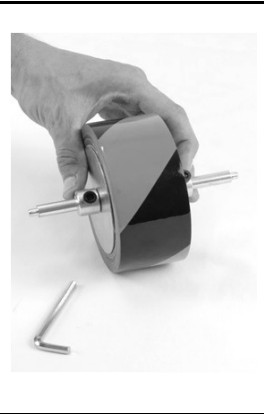
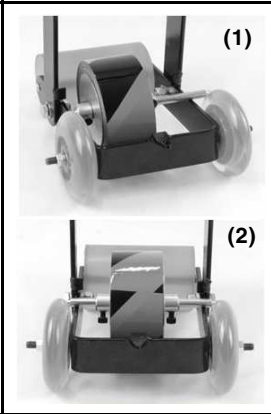
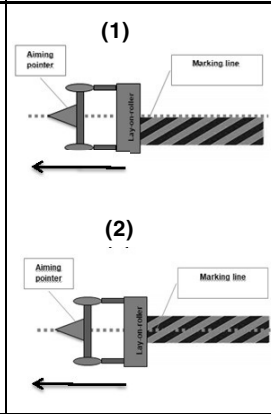

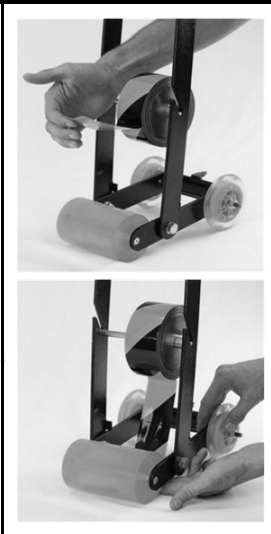
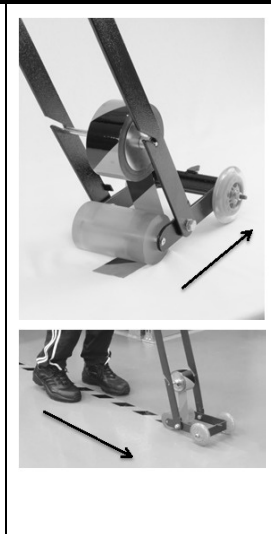


User manual Tape applicator

forPVC-floor markingtapes

Assembling and use of the tape applicator

	<p>Step 1</p> <p>Remove the tape holder (use pressure as necessary) from the mounting hole of the tape applicator.(it might not have been fitted yet so look for it in the carton - included are two and an Allen Wrench)</p>		<p>Step 2:</p> <p>Remove the screw closure from the tape holder. Take one of the supporting discs off the tape holder. Position the remaining disc to achieve your selected roll position - see step 4 and comment 2)</p>		<p>Step 3:</p> <p>Fasten the screw closure with the Allen@wrench. This will be the "permanent" disc and the rolls of tape will always be loaded via removal and refitting of the other disc)</p>
	<p>Step 4:</p> <p>Put the floor marking tape on the tape holder (as close as possible to the supporting disc which is already fixed) and put the second supporting disc, which was removed in step 2, back on. Fasten the screw closure with the Allen@wrench.</p> <p>It is important that the tape is strongly fixed between the two supporting discs otherwise inaccuracy during the floor marking process might cause problems.</p>		<p>Comment 1:</p> <p>There are two different ways to align and to fix the tape on the tape holder between the two screw closures:</p> <p>1) The aiming pointer and the outside margin of the tape are exactly on the same level.</p> <p>2) The aiming pointer is aligned to the middle of the tape.</p>		<p>Comment 2:</p> <p>The drawing shows the result of the two different ways of tape fixing which are described in Comment 1.</p>
	<p>Step 5:</p> <p>Put the tape holder in the mounting hole of the tape applicator.</p> <p>The tape holder might be wider than the width of the metal stand, so to place the roll into the mounting holes (as shown) you might need to push apart the two bars of the stand to insert the shaft of the tape holder into the mounting holes.</p> <p>Note:</p> <p>Before fitting the tape holder into the mounting holes check in which direction the roll needs to be unwound (see step 6)</p>		<p>Step 6:</p> <p>Tread the tape underneath the lay-on-roller with the adhesive side down. Furthermore the adhesive side of the tape needs to point in the direction of travel.</p>		<p>Step 7:</p> <p>Align the aiming pointer of the tape applicator to the marking line. Start applying the tape by walking forward with a slight amount of downward pressure on the lay-on-roller.</p> <p>Note - Make sure the floor is clean and dry, free from dust, oils and other contaminants. Once the tape has been applied you can add additional pressure to areas that might need assistance.</p>